


STI (4.5mm) BLOW BACK

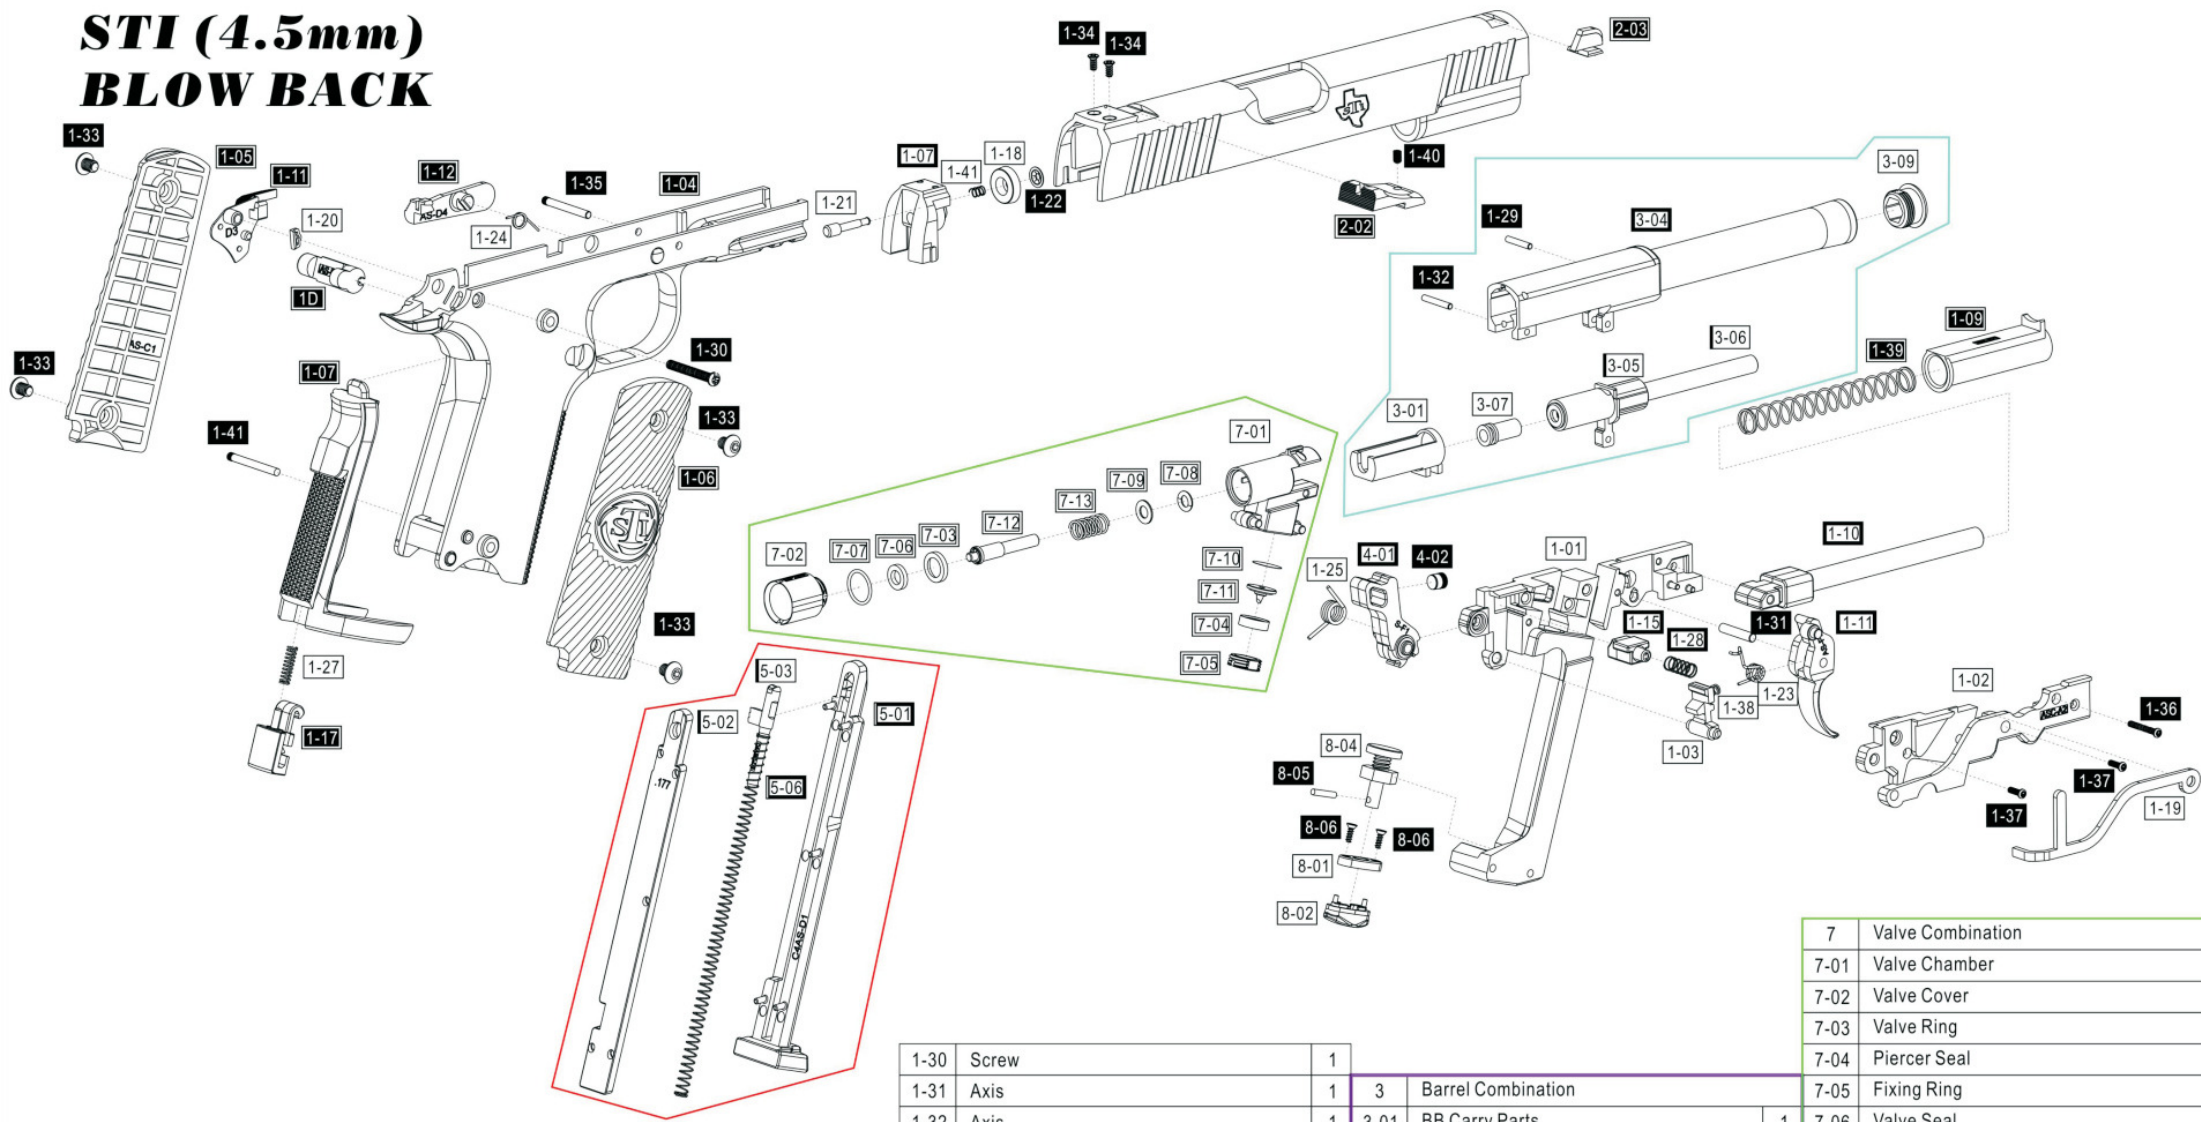

1-01	Body Seat	1	1-14	Mag. Catch	1	1-30	Screw	1	3	Barrel Combination	7	Valve Combination	
1-02	Body Cover	1	1-16	Safety Catch	1	1-31	Axis	1	3-01	BB Carry Parts	7-01	Valve Chamber	1
1-03	Hammer Stopper	1	1-17	Back Cover Catch	1	1-32	Axis	1	3-04	Outer Barrel	7-02	Valve Cover	1
1-04	Frame	1	1-18	Rubber Chip	1	1-33	Screw	4	3-05	BB Holder	7-03	Valve Ring	1
1-05	Grip(L)	1	1-19	Trigger Connector	1	1-34	Screw	2	3-06	Internal Barrel	7-04	Piercer Seal	1
1-06	Grip(R)	1	1-20	Safety Catch	1	1-35	Axis	1	3-07	BB Pusher	7-05	Fixing Ring	1
1-07	Back Cover	1	1-21	Fixing Axis	1	1-36	Screw	1	3-09	Barrel Tip	7-06	Valve Seal	1
1-08	Recoil Spring Guide	1	1-22	Washer	1	1-37	Screw	2	1-29	Axis	7-07	O-ring	1
1-09	Recoil Spring Guide Cover	1	1-23	Trigger Spring	1	1-38	Stopper Spring	1	4-01	Hammer	7-08	O-ring	1
1-10	Slide Cover	1	1-24	Slide Stop Spring	1	1-39	Recoil Spring	1	4-02	Attacked Block	7-09	Washer	1
1-11	Trigger	1	1-25	Hammer Spring	1	1-40	Screw	1	5	Mag. Combination	7-10	Filter	1
1-12	Slide Stop	1	1-27	Back Cover Catch Spring	1	1-41	Fixing Axis Spring	1	5-01	Mag. Body	7-11	Piercer	1
			1-28	Safety Catch Spring	1	1-43	Axis	1	5-02	Mag. Cover	7-12	Valve	1
						2-01	Slide	1	5-03	BB Follower	7-13	Valve Spring	1
						2-02	Front Sight	1	5-04	Mag. Base	8	Knob Combination	
						2-03	Aiming Hole	1	8-01	Knob Seat	8-01	Knob Seat	1
									8-02	Knob Cover	8-02	Knob Cover	1
									8-04	Piercing Level Screw	8-04	Piercing Level Screw	1
									8-05	Axis	8-05	Axis	1
									8-06	Screw	8-06	Screw	2