



# B36F

- |                             |                             |                    |
|-----------------------------|-----------------------------|--------------------|
| 01. Piston                  | 17. Steel Ball              | 33. Safety Lock    |
| 02. Seal                    | 18. Operating Arm Pin       | 34. Operating Arm  |
| 03. Piston Rod              | 19. Safety Piece            | 35. Lever Pin      |
| 04. Piston Spring           | 20. Tension Spring          | 36. Little Lever   |
| 05. Cocking Block           | 21. Safety Pin              | 37. Connecting Pin |
| 06. Front Sight Piece       | 22. Clip                    | 38. Long Lever     |
| 07. Screw                   | 23. Safety                  | 39. Screw          |
| 08. Scale                   | 24. 3X25 Screw              | 40. Screw          |
| 09. Screw                   | 25. Trigger                 | 41. Screw          |
| 10. Lens Slot Setting Block | 26. Hook                    | 42. Screw          |
| 11. Cocking Block Pin       | 27. 3X6 Screw               | 43. Trigger Circle |
| 12. Front Sight             | 28. Torsional Spring        | 44. Wooden Stock   |
| 13. Body                    | 29. 3X11 Screw              | 45. Washer         |
| 14. Tube Plug               | 30. Trigger Filler lo Block | 46. Stock End      |
| 15. Screw                   | 31. 4X18 pin                |                    |
| 16. Spring for Steel Ball   | 32. Safety Lock Spring      |                    |

Notice: There is no Part. No. 14 in model B36